

Dear Customer,

Thank you for purchasing TAKSTAR DA6 Speech Microphone. Please read the user manual carefully before use and keep it for reference in future.

If you have any questions or suggestions, please contact our local dealer.

■ Features

- Combining microphone, power amplifier and speaker together, suitable for speech, promotion, Karaoke, etc.
- Rear earth material speaker, light weight, excellent sound, high volume, peak power 6W
- Pressing one button to switch between Speech Mode and Karaoke Mode, which is more convenient for operation
- Volume control function to adjust the volume based on the venue
- Built-in DSP chip with the feedback rejecting function to reject feedback effectively
- Ultra-long standby, turning off automatically after no signal input for 15 minutes to save the power consumption
- High-capacity Lithium battery for energy saving and environmental protection, approx. 10h operation time
- Compact design, comfortable to hold, suitable for sound reinforcement and Karaoke for a long time

■ Product content

DA6 speech microphone	1pc
Type-C charging cable	1pc
User manual	1pc

■ Applications

Teaching, tour guide, training, promotion, Karaoke

■ Specifications

Speech Microphone


- Frequency Response: 100Hz-15KHz
- Peak Power: 6W
- Speaker Impedance: 4Ω
- THD: THD≤5% 1KHz@4R, 4W
- Operating Voltage: 3.4V-4.2V
- Battery Type: Li-ion battery
- Battery Capacity: 3.7V/2000mAh
- Charging: DC 5V=1A
- Charging Time: approx. 2h
- Operation Time: approx. 10h (speech mode)
- Weight: approx. 178g
- Dimensions: Φ61mm*206mm (Dia*H)

Cartridge

- Cartridge: back electret
- Polar Pattern: unidirectional
- Frequency Response: 150Hz-16KHz
- Sensitivity: -47±3dB (0dB=1V/Pa, at 1KHz)

Note: The data is tested by Takstar Laboratory, and Takstar has the final interpretation right!

■ Function instructions

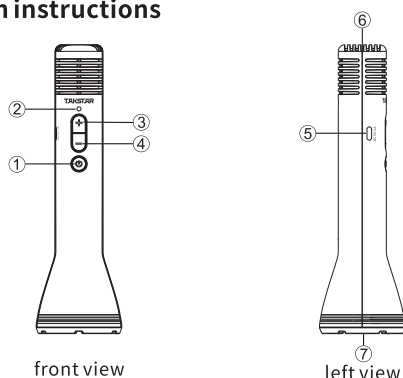


- Power button:** Long press the button for 2 seconds to turn on or off the speech microphone. When it is power-on, press the power button successively to switch between Speech Mode and Karaoke Mode. If the speech microphone is not used for 15 minutes, it will automatically power off.
- Power LED:** It remains green when there is enough battery power and lights up red when the battery can be used for less than 1 hour. The LED flashes red when the speech microphone is being charged and lights up green when the speech microphone is fully charged.
- "+" button:** Press it to increase the volume of the speech microphone. A total of 3 levels of volume are available (The default is the maximum volume when the speech microphone is turned on).
- "-" button:** Press it to decrease the volume of the speech microphone. It can only be minimized to about 60% of the total volume. There is no mute function.
- Charging interface:** Connect to the Type-C charging cable. Please use a charging head with a specification of 5V=1A and 3C certification to charge the speech microphone.

- Cartridge:** When speaking to the speech microphone, make sure that your mouth maintains a distance of 3-5 cm with the cartridge. Do not cover the cartridge with your hand; otherwise, it will produce acoustic feedback.
- Speaker:** Do not put the speaker too close to people's ears to avoid hearing damaging. Keep the speaker clean.

Note: When using the speech microphone for the first time, please fully charge it before use. When the speech microphone is fully charged, please stop charging it to avoid overcharging the battery. If the speech microphone is not used for a long time, please charge it once every six months to avoid over-discharge of the battery, otherwise it will affect the battery performance.

■ Operation instructions

Holding diagram as below:

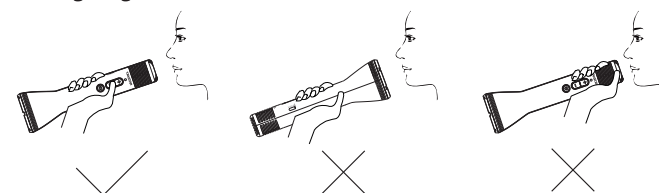

Wireless pairing method:

When the speech microphone is used for the first time, it needs to be paired with a mobile phone or a wireless playback device. The steps are as follows:

- When you press the power button to switch to Karaoke Mode at the power-on state, the speech microphone enters the searching and pairing state of wireless playback.
- Enter the "Settings" menu on the mobile phone, find the option of wireless function, and turn on the wireless playback function of the mobile phone. After searching for "TAKSTAR DA6", click "TAKSTAR DA6" for connection. When the speech microphone can be played wirelessly, it means the connection is successful.
- When you switch the speech microphone to the wireless playback mode, it will automatically reconnect to the wireless playback device if it has been connected to the device before. When successfully connected, the speech microphone will be disconnected from the wireless playback device when switched to Speech Mode.

■ Safety instructions

To avoid possible personal injury or property damage caused by electric shock, high temperature, fire, radiation, explosion, mechanical hazards, and improper use, please read and observe the following items before using the product.

- Please do not put the speaker close to people's ears to avoid hearing damage.
- If there is any abnormality (such as smoke, odor, etc.) during use, please turn off the power switch and unplug the power plug immediately, and then send the product to the dealer for maintenance.
- The product and accessories should be placed indoors in a dry and ventilated place. Do not store them in a humid and dusty environment for a long time. Avoid getting close to fire, rain, water, excessive collision, throwing, vibrating the machine and covering the ventilation holes during use, so as not to damage its function.
- When using the product, you must abide by the relevant safety regulations. Please do not use the product in the occasions that are clearly prohibited by laws and regulations to avoid accidents.
- Please do not disassemble, refit or repair the product by yourself to prevent personal injury. If you have any questions or service needs, please contact your local dealer.
- The product is sold without a power adapter. If you use a power adapter to supply power, you should purchase and use a power adapter that has obtained CCC certification and meets the standard requirements.

注意事项:

- 本单为保修凭证, 请用户妥善保管, 如有遗失, 恕不保修或退换。
- 保修期限制: 购买之日起十二个月内。
- 除了不可抗力事件损坏外, 由本公司负责, 免费维修。
- 如属保管不善或使用不当造成的损坏, 维修点将酌情收费。
- 擅自拆卸维修者, 不予保修。
- 以上保修条款仅限于中国国内市场适用 (不包含港澳台地区)。

产品服务保证书

姓名: _____ 电话: _____ 地址: _____
商品: _____ 型号: _____ 购买日期: _____ 年 _____ 月 _____ 日

维修记录栏(由维修员填写)	维修员签名	日期

◆ 广东得胜电子有限公司 ◆ 电话: 400-6828-333 ◆ 地址: 广东省惠州市博罗县龙溪街道富康一路2号

※ The product specification is subject to change without prior notice.