 
 


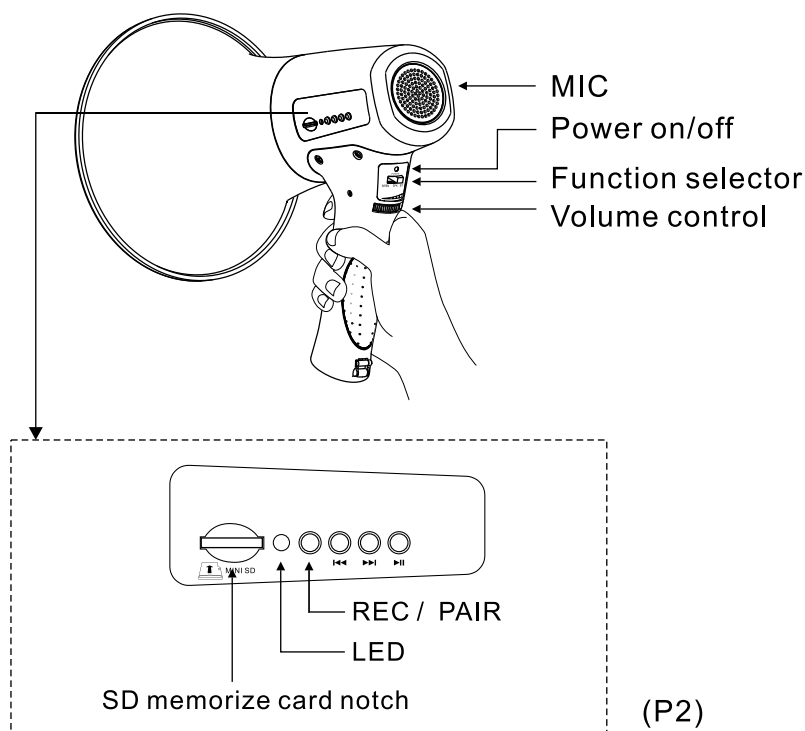

**MEGAPHONES**  
**HAND GRIP TYPE**

## 1: operating instruction


- 1): Holding the megaphone handle by hand and press the yellow Power Supply Switch which on the lowerside of the handle by forefinger. Power LED on the upper side of the handle will light on. (see P1)
- 2): Set the Function Switch which on the upper side of the handle to middle and speak to the MIC in a suitable position. The sound will send out.
- 3): Rotate the yellow Volume Control which on the upper side of the handle to have an ideal sound.
- 4): Set the Function Switch to left, SIREN/WHSTLE will be sent out(see P2).

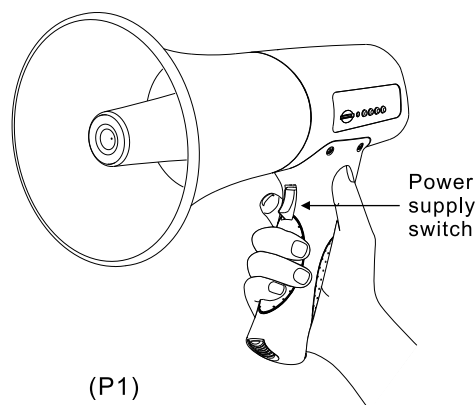

## 2:MP3 operation instruction


- 1): Using the MP3 player: Set the function switch which on the upper side of the handle to right(see P3), insert the SD card to SD slot, then the MP3 automatically enter into stop mode and the LED continually be lighted on. Only when you press the STOP/PLAY button and the LED enter into flashing status you can play it.
- 2): In play mode, press STOP/PLAY button to stop playing

- 3): In play mode, press PRE or NEXT button to go to the previous or next song and the corresponding suggestion sound will be displayed by the MP3
- 4): On the MP3 model, press REC button, the green LED will be lighted. Then the MP3 begin recording and storing the content in SD card automatically. Press the REC button again, it will stop recording and begin playing the content that have been recorded.

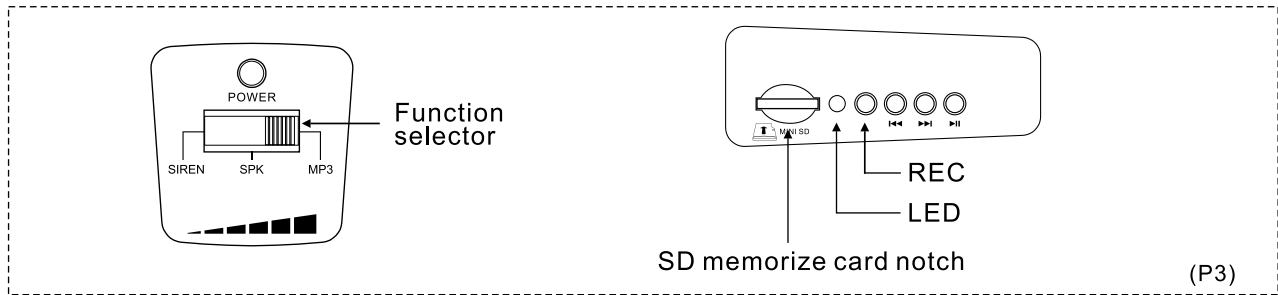




### 3:Bluetooth operation instruction

- 1): Using the Bluetooth player: set the function switch which on the upper side of the handle to middle(see P4), the Bluetooth playing enter into standby mode and the blue LED will be flashed at interval, then hold the PAIR button for 3 seconds to enter searching mode, if not be connected within 60 seconds it will enter into standby mode.
- 2): Bluetooth device will display the data of SEIKAKU BT2.1 after matched. Tap the data of SEIKAKU BT2.1 to finish the matching. Set the functional switch on the handle upside to right and press STOP/PLAY button for playing.
- 3): In play mode, press STOP/PLAY button to stop playing.
- 4): In play mode, press PREV or NEXT button to go to the previous or next song and the corresponding suggestion sound will be displayed by the Bluetooth.
- 5): If the connection interrupted for the device without signal after connected , the Bluetooth player will search the previous device for 60 seconds ,when it is not found, it will enter into standby mode.
- 6): If the connection interrupted voluntarily after connected, the Bluetooth player will enter into standby mode.
- 7): Hold the PAIR button for 3 seconds after connected, the Bluetooth player will remove the previous device and enter into searching mode.
- 8): If the Bluetooth device is below 2.1 version, please input the password "0000".

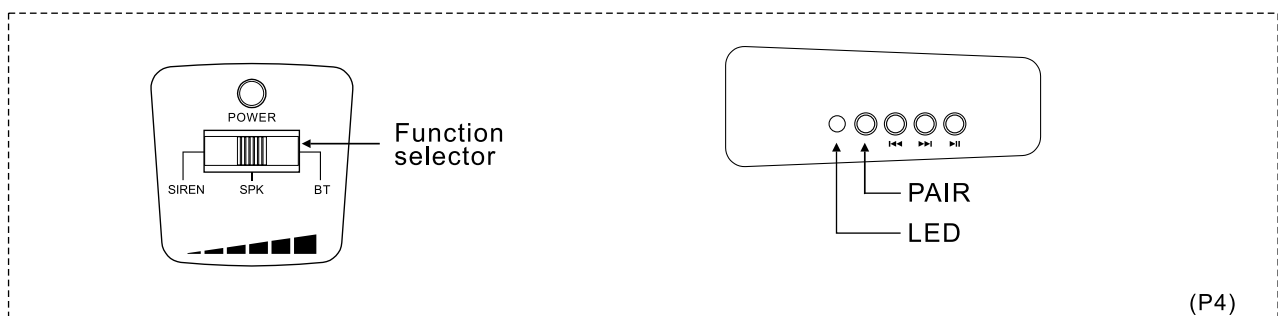

## 4: Battery replacement

- 1): Slide the key which in the end of the handle upward to open the cover of the handle. (see P5).
- 2): Take out the battery container and put in 6 pieces C type batteries in right polarity. (see P6)
- 3): In-sert the battery container to the handle in right polarity. (see P7)
- 4): Close the cover by slide the key downward.

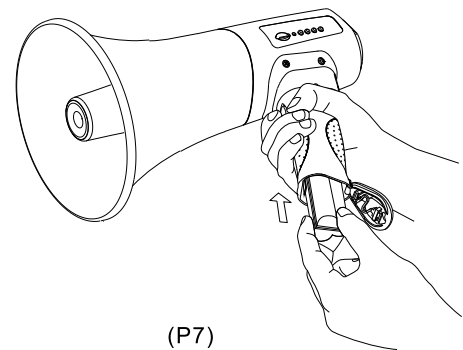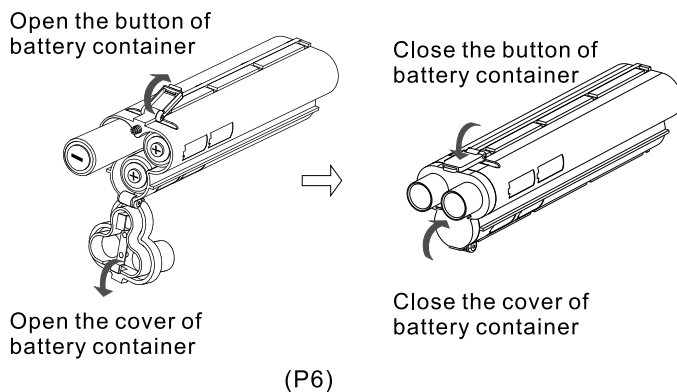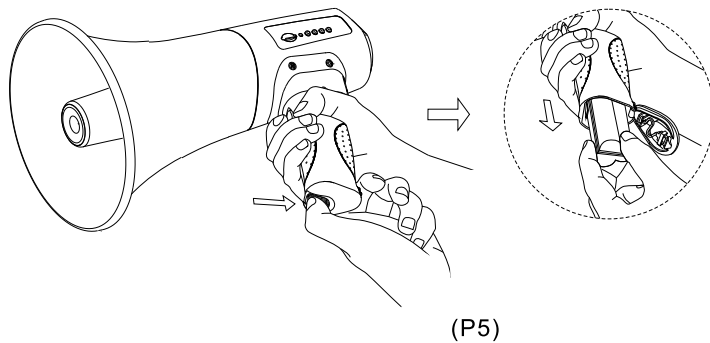

## 5: Attention

- 1): Make sure the batteries are inserted in right polarity.
- 2): Take out the batteries when un-used in long periods of time.
- 3): The batteries should be replaced in time when the sound is not large enough.
- 4): The power LED will be light on red to indicate the batteries current is not enough.  
The batteries should be replaced or the volume should be adjusted.
- 5): Off the yellow power supply switch when not using and the power led will off.

## 6: Technical Specification

|                             |  |
|-----------------------------|--|
| Power output:               | 10W                                    |
| Power Supply:               | AA type (UM-3)/6 pieces (9V DC)        |
| Using time:                 | 10 hours (Speaking time)               |
| Receive Range:              | 0.45KM (quiet suburban), 0.25KM (city) |
| Dimensions:                 | 185mm/310mm (diameter)                 |
| Weight (without batteries): | 0.9kg                                  |





## 一:操作說明

1): 當手握著喊話器的把手時，用食指按下黃色電源開關(見圖一)。

2): 把手上方功能開關撥到中間，以一個適當的位置，用嘴對著喊話器的送話口說話，聲音就會從揚聲器傳出。

3): 用大拇指轉動把手上方黃色音量控制鈕，調節出無雜訊的理想聲音。

4): 將把手上方功能開關撥到左邊 (警報/哨聲)(見圖二)。

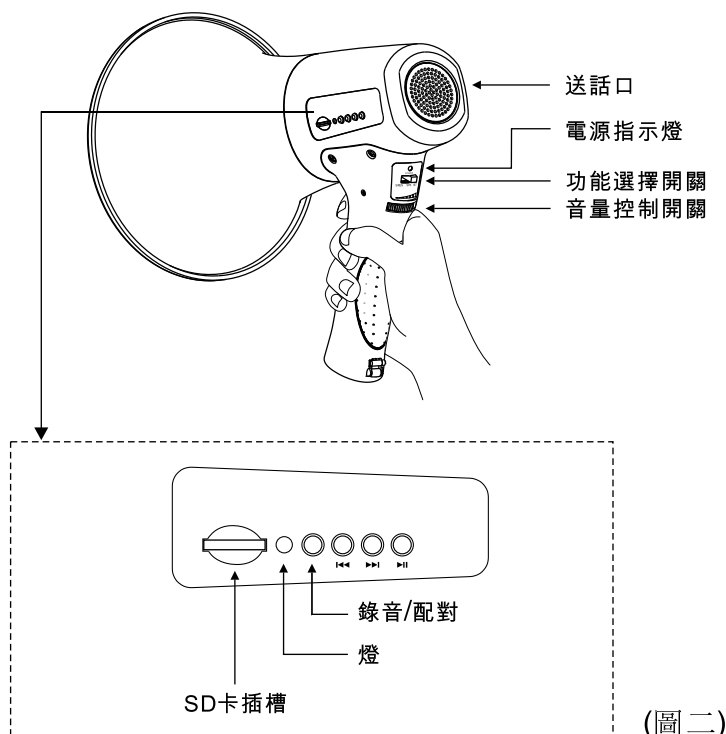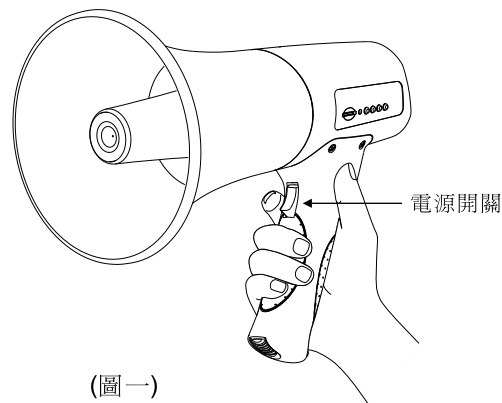


## 二:MP3操作步驟

1): 使用MP3播放器時，請將把手上方功能開關拔到右邊(見圖三);在SD卡入口處插入SD卡，這時MP3自動進入暫停狀態，MP3指示紅色LED處於常亮狀態。此時需要按下播放/暫停鍵，這時紅色LED出現閃爍狀態;方可播放。


2): 在播放狀態，按下播放/暫停鍵，MP3即處於暫停狀態。

- 3): 在播放狀態, 按下PREV或NEXT按鍵, MP3跳到上一曲/或下一曲, 此時會有相應提示音。
- 4): 在MP3模式下按下REC按鍵, 綠色燈點亮。MP3進入錄音狀態, 并將錄制好的內容自動存入SD卡, 再次按下REC鍵退出錄音模式, 并播放當前錄制好的內容。

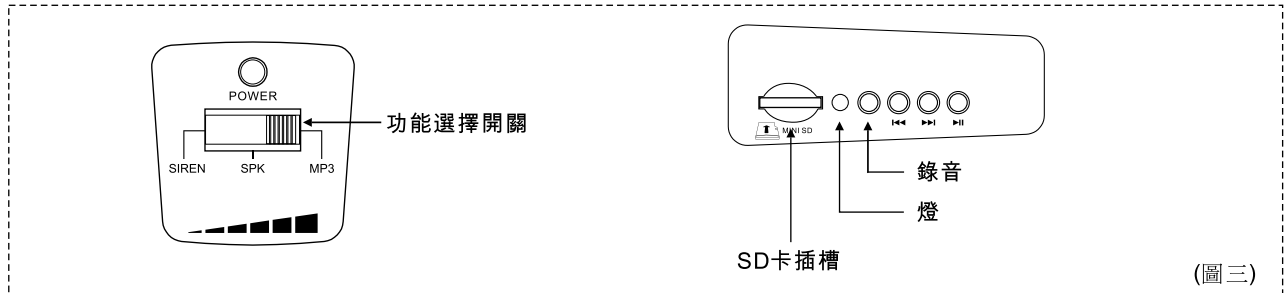


### 三.藍牙操作步驟

- 1): 使用藍牙播放器時,將手把上放功能開關拔到中間(見圖四), 藍牙進入待機狀態, 藍牙指示綠色LED出現間隔閃爍狀態, 此時需按住PAIR鍵3秒后才進入查找狀態, 而查找狀態保持60秒, 沒有連接上再進入待機狀態。
- 2): 如配對好后會在你所使用設備出現SEIKAKU BT2.1數據。再點即你所使用設備上SEIKAKU BT2.1數據,配對完成。如需要播放請將手把上功能開關拔到右邊;只要按下播放/暫停鍵即可播放。
- 3): 在播放狀態,按下播放/暫停鍵,藍牙即處于暫停狀態。
- 4): 在播放狀態,按下PREV或NEXT按鍵,藍牙跳到上一曲/或下一曲,此時會有相應提示音。
- 5): 連上設備后, 如因設備無信號斷開連接,會查找原配對設備60秒, 如未找到,則進入待機狀態。
- 6): 連上設備后, 如設備主動斷開連接, 則直接進入待機裝態。
- 7): 連上設備后, 如按住PAIR鍵3秒, 則清除先前連接設備, 并進入查找狀態。
- 8): 如客戶藍牙設備版本底于2.1時, 需輸入密碼"0000"。

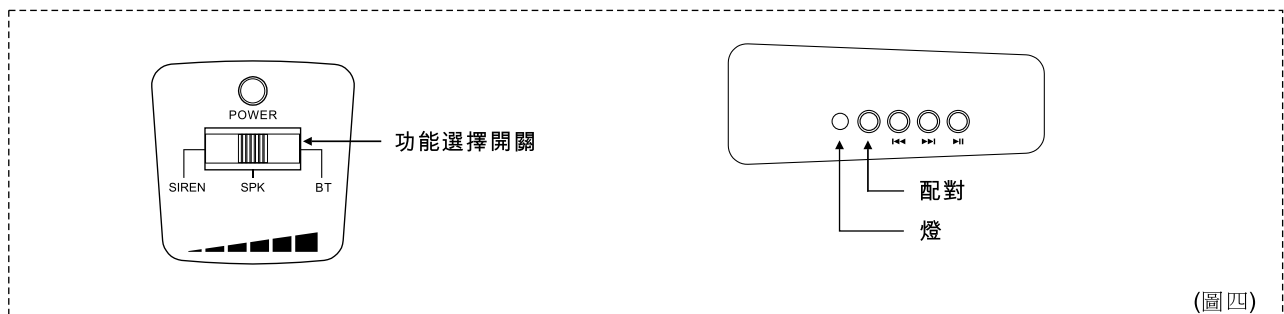


## 二:更換電池


- 1): 用大拇指將手把下方開關向下推，手把後蓋打開(見圖五)。
- 2): 取出電池盒，按正確的電池極性置入六顆3號電池到電池盒(見圖六)。
- 3): 將組裝好的電池盒按正確的極性插入手把座內(見圖七)。
- 4): 扣緊手把後蓋開關。

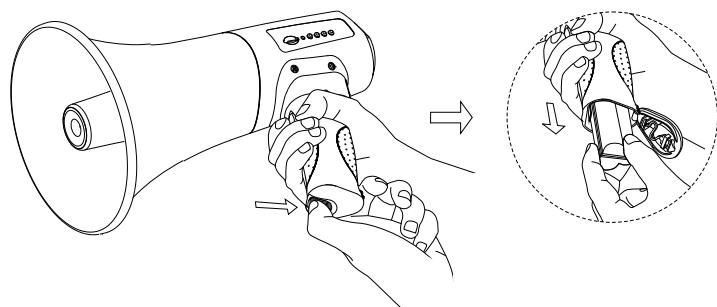

(圖五)

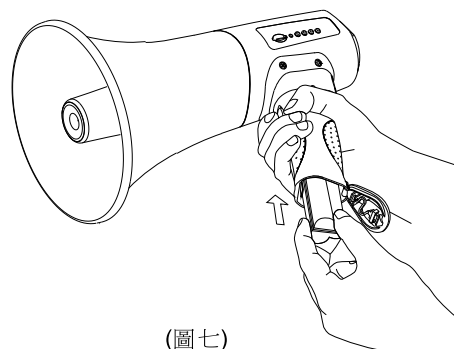

(圖七)

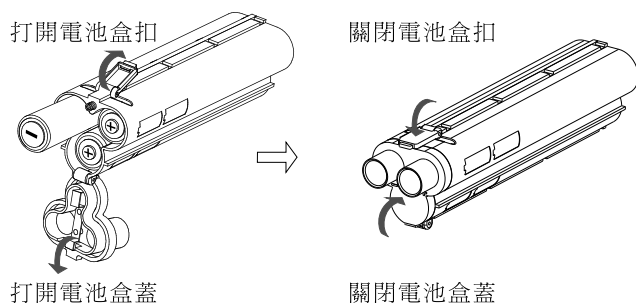

(圖六)

## 三:注意事項

- 1): 應確認電池是否按正確的極性裝入機內。
- 2): 當長時間不使用喊話器時，應取出電池。
- 3): 當電池消耗到不能提供理想音量時，應更換電池。
- 4): 當手把上的紅燈亮起時，提示電池電量不足，這時需要將音量控制鈕調到適當位準或更換電池。
- 5): 如不使用時請將手把下方黃色電源開關關閉，這時手把上方綠燈熄滅。

## 四:電氣規格

|           |                      |
|-----------|----------------------|
| 輸出功率:     | 10W                  |
| 使用電池:     | AA電池6顆(不提供)          |
| 使用時間:     | 10小時(喊話時間)           |
| 傳輸距離:     | 0.25~0.45km(視使用情況而定) |
| 尺寸:       | φ185(口徑)*310(全長)mm   |
| 重量(不含電池): | 0.9kg                |